




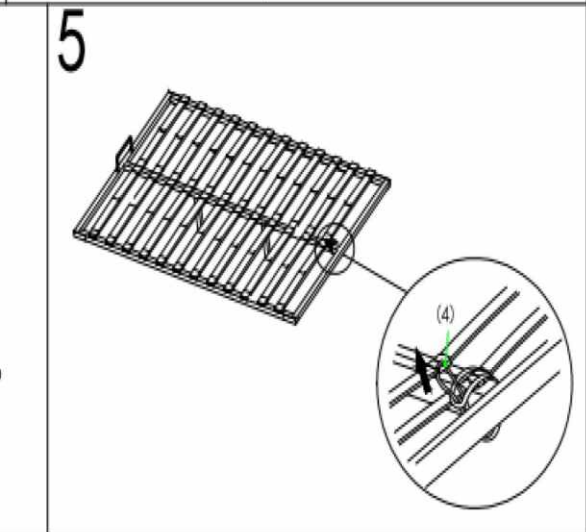
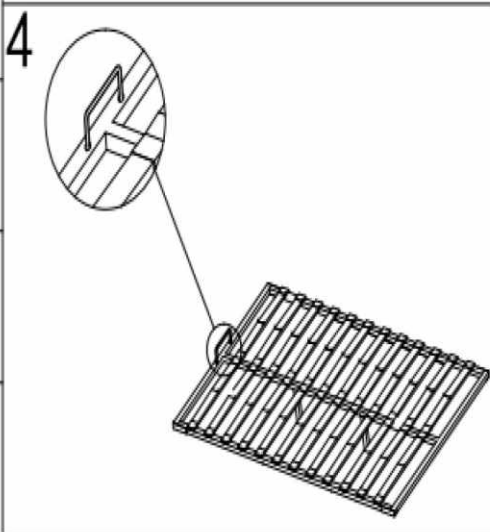


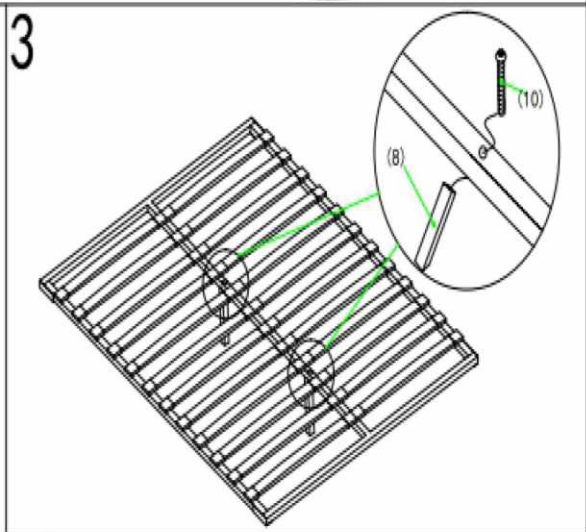

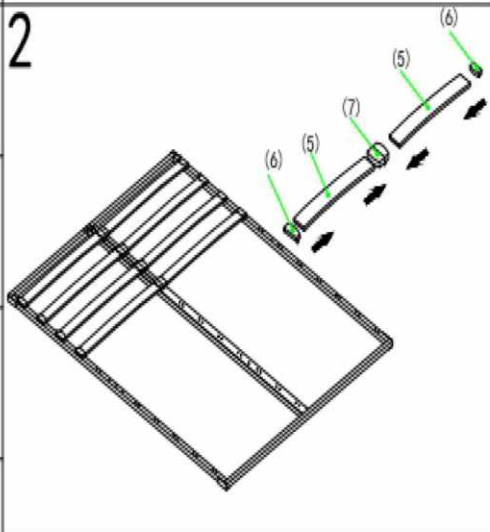

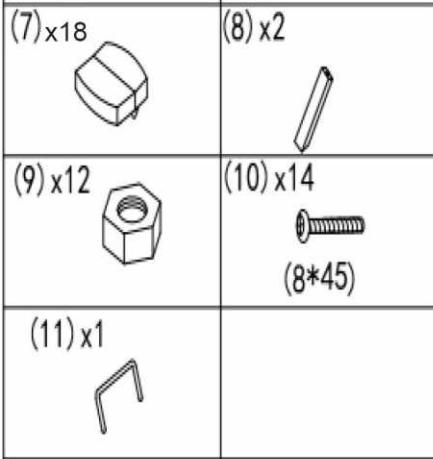

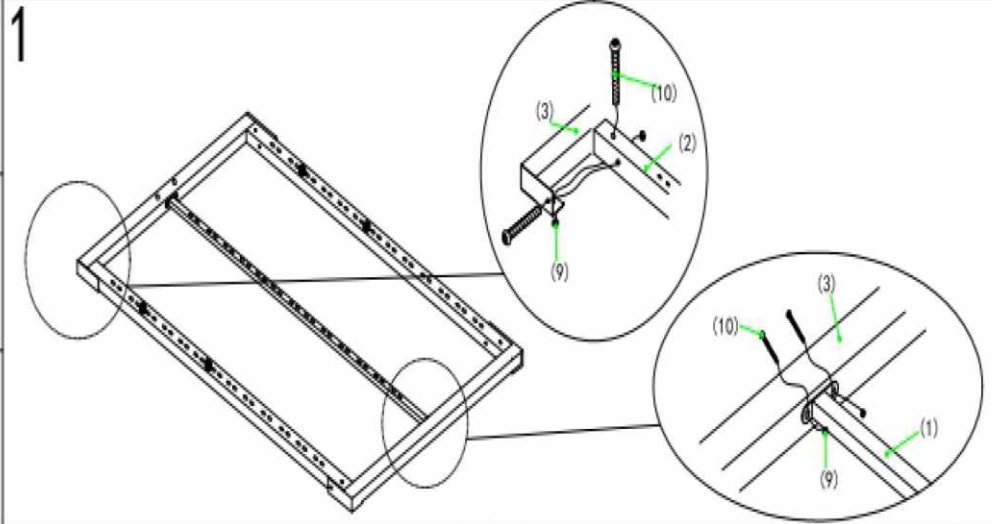

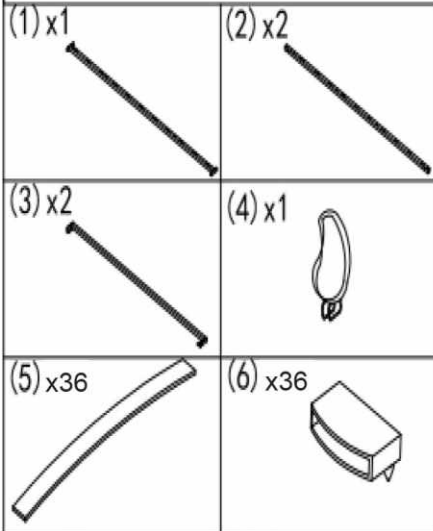









200cm


DORLEN




DORLEN

Ax1 	Bx1 
Cx2 	Dx1 
Ex1 	Fx8 (8*50) 
Gx22 (8*20) 	Hx8 (8*40) 
Ix1 	Jx2 
Kx1 	Lx4 
Mx6 	Nx1 
Ox4 12x5x4cm 	Px2 
Qx2 	Rx1 


6

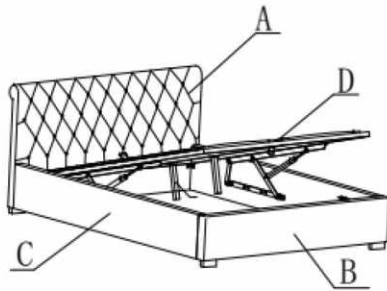


7

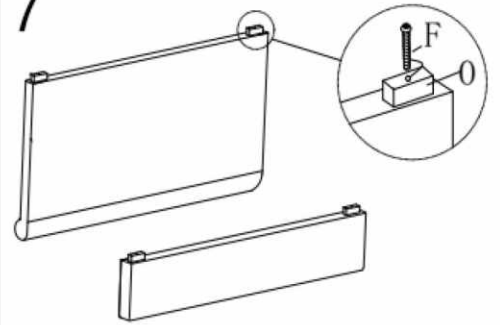


8

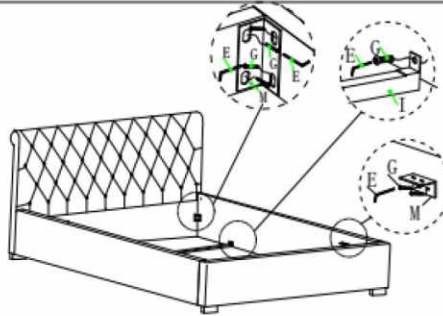

9

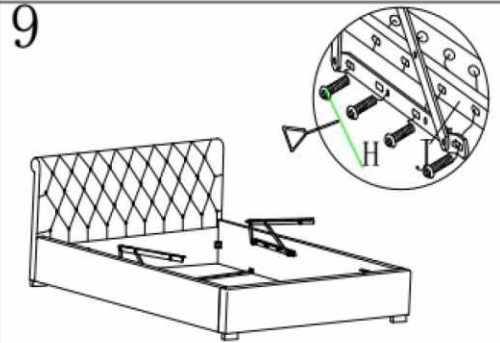


10

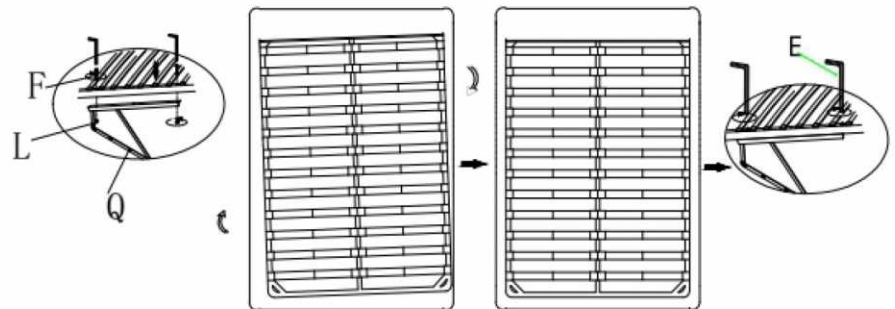


DORLEN

11

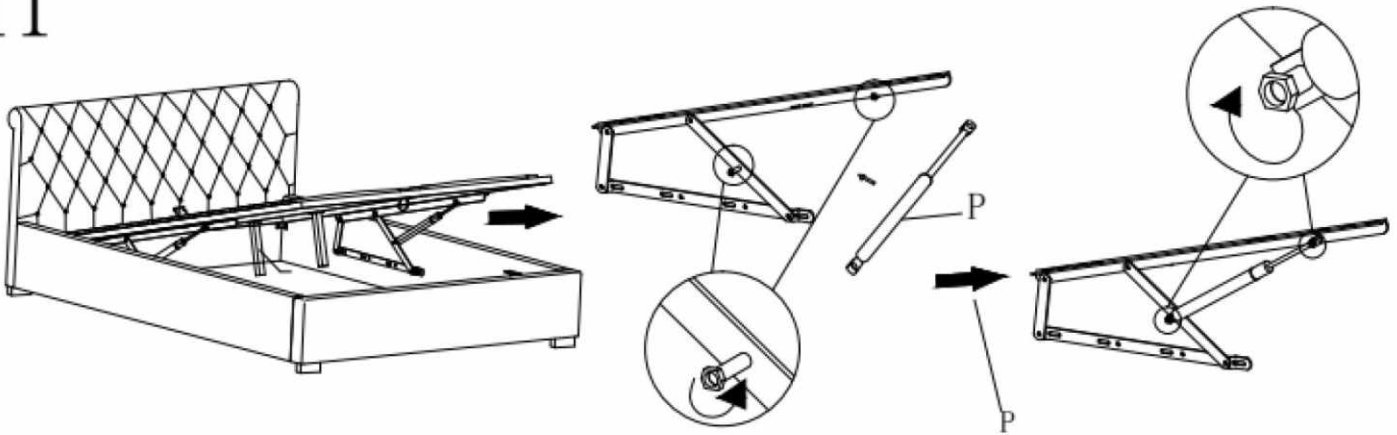

12

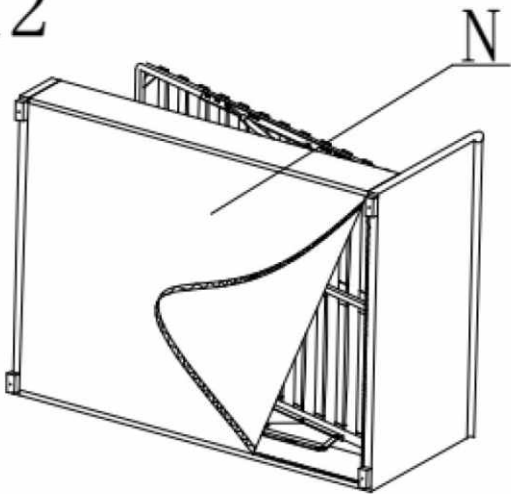

13

